

## THE TYPE 1304-B BEAT-FREQUENCY AUDIO GENERATOR

● **IN THE 27 YEARS** of its existence as a commercial instrument, the beat-frequency oscillator has become recognized as the most satisfactory audio-frequency power source for general-purpose use. Because of its constant output over wide frequency ranges and its excellent waveform, it meets particularly well the stringent requirements of a signal source in the measurement of response and distortion characteristics of all audio-frequency equipment. It is widely used, for instance, in testing broadcast equipment, p-a systems, hi-fi installations and their components, such as filters, transformers, and speakers.

The most important advantages<sup>1</sup> of the beat-frequency oscillator can be

summarized as follows:

- (1) Constant output amplitude over the working frequency range.
- (2) Excellent waveform.
- (3) Wide frequency range — 3 decades on one sweep of dial.
- (4) Additional range obtainable by shifting the frequency of the fixed oscillator.
- (5) No frequency change with load or with output control setting.
- (6) High stability of frequency, with slight, easily correctable warm-up drift.
- (7) No lock-in at multiples of line frequency.

<sup>1</sup>"Oscillator Considerations," *General Radio Experimenter*, Vol. xxviii, No. 6, November, 1953, pp. 6-7.

Figure 1. Panel view of the Type 1304-B Beat-Frequency Audio Generator.





Also

IN THIS ISSUE

Page

NEW BRANCH OFFICE.....	7
SUMMER CLOSING.....	7

The General Radio Company has been manufacturing beat-frequency oscillators since 1927, when we introduced the first commercial version of this popular instrument. The latest design, the TYPE 1304-B Beat-Frequency Audio Generator, is, we believe, the finest beat-frequency audio oscillator that has ever been offered for sale.

This new instrument has been improved over its predecessor<sup>2</sup> in several important respects:

- (1) The frequency range of 20 cycles to 20 kc has been extended by the addition of a second frequency range of 20 kc to 40 kc.
- (2) The amplifier has been replaced by one of a new and improved design.
- (3) A voltmeter and a step attenuator have been added to the output system. These changes convert the oscillator to an audio signal generator whose output voltage is accurately calibrated.

### Oscillators

The basic operation of the beat-frequency audio generator can be seen by referring to the schematic diagram, Figure 2.

<sup>2</sup>D. B. Sinclair, "Making a Good Instrument Better," *General Radio Experimenter*, Vol. xxiii, No. 1, June, 1948.

The voltages from two oscillators are amplified and mixed to obtain a voltage at the difference of the two oscillator frequencies. Any variation in the frequency of either oscillator results in a variation of the beat-frequency. One oscillator is normally fixed in frequency and the other is made adjustable to vary the beat frequency.


The stability of the output frequency is determined by the relative stability of the two beating oscillators, which are made inherently stable by the use of the best quality components. For example, the oscillator coils are multi-layer, universal-wound coils on ceramic forms to obtain high dimensional stability. The fixed capacitors in the oscillator circuit are high-quality, silvered-mica capacitors. Furthermore, the capacitors are matched in the finished instrument by actual test during a heat run. The two oscillator circuits are also mounted on the same rugged aluminum casting to insure equalization of temperature of the two circuits.

By this process of careful design to obtain high inherent stability and equalization of the two oscillator systems, it has been possible to keep the frequency drift on warm-up to a very low value.

The frequency of the variable oscillator is tuned over the range from 190 kc to 170 kc, approximately, by the main tuning capacitor.

This capacitor, shown in Figure 3, is accurately assembled on a rugged aluminum casting, with the aid of a precision assembly jig. Carefully designed

Figure 2. Elementary schematic circuit diagram of the beat-frequency audio generator.

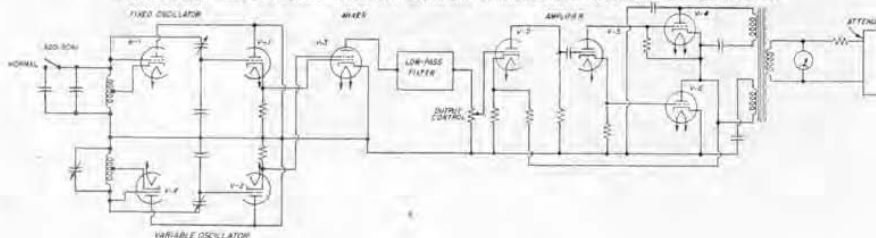



compensating plates are provided for adjusting the capacitance so that the output beat-frequency accurately tracks the exact logarithmic calibration of the pre-calibrated dial, which covers a frequency span of three decades, 20 c to 20 kc, with a rotation of  $240^\circ$ , or  $80^\circ$  per decade.

The logarithmic calibration is particularly advantageous on any audio oscillator, because it is common practice to plot frequency characteristics on a logarithmic frequency scale. When the oscillator is used in conjunction with a recorder that records on logarithmic or semi-logarithmic paper, the dial can be geared directly to the recorder mechanism.<sup>3</sup>

For normal operation, the fixed oscillator generates a voltage at a frequency of approximately 190 kc, which beats with the voltage from the variable oscillator to cover the range from 20 c to 20 kc. The added range from 20 kc to 40 kc is obtained by shifting the fixed oscillator frequency to approximately 210 kc. Of course, for this range the frequency scale is no longer logarithmic.

The frequency of the so-called fixed oscillator is actually adjustable over a small range by means of a frequency-increment control, having a dial that is direct reading over the range of  $\pm 50$  cycles, independent of the output frequency. This control makes possible a precise incremental change in frequency at any setting of the main dial. For example, if the main dial is set to 1000 cps, the output frequency can be varied from 950 cps to 1050 cps by means of the frequency-increment control. Such a control is invaluable for measurements on tuned circuits, on narrow band filters, on mechanically resonant systems, on acoustic resonators, and, in general, for de-

<sup>3</sup>L. P. Reitz and I. G. Easton, "Automatic Recording with the Beat-Frequency Oscillator," *General Radio Experimenter*, Vol. xxii, No. 8, January, 1948.

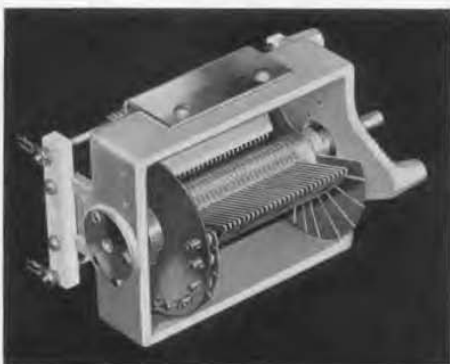


Figure 3. View of the logarithmic capacitor used for the main frequency control element.

termining the fine structure of frequency-dependent phenomena.

In order to make the frequency-increment control direct reading on the extended range of 40 kc as well as the normal range, a compensating capacitive network is switched in by the range switch. This compensation is necessary because of the large change in the capacitor of the tuned circuit required to shift the fixed oscillator frequency by 20 kc.

### Buffer Amplifiers

A buffer amplifier is used for each oscillator. The primary function of these amplifiers is to isolate the oscillators so that cross coupling through the mixer is negligible, and the locking of the oscillators is kept to a point where beats of less than 1 cycle can be sustained without pull-in. The amplifiers also make possible coupling to a high-impedance point of the oscillator circuit, and the coil of the oscillator is thereby kept simple with the concomitant advantage of ease in making the coil uniform and stable.

### Mixers

The outputs of the buffer amplifiers are applied to the grids of a pentagrid



converter tube used as a mixer. The exceptionally low distortion from the mixer is achieved in part by an unusual pair of bias adjustments. A common cathode bias for the two grids of the pentagrid mixer is adjusted by a rheostat, and the bias for the signal grid by a potentiometer in parallel with the rheostat. The two adjustments for output voltage and minimum distortion are thereby made essentially independent. These adjustments, together with separate controls on the voltage from each oscillator and the isolation achieved by the buffer amplifiers, contribute an important part in making possible the remarkable performance of this beat-frequency oscillator.

#### Filter

The desired beat signal at the output of the mixer is separated from the higher frequency components by a low-pass filter.

The extension of range to 40 kc necessitated a redesign of this low-pass filter. The cut-off frequency of the filter had to be increased by a factor of two, and at the same time the attenuation at the oscillator frequencies had to be increased because the response of the new amplifier is good even at the oscillator frequencies of about 200 kc.

#### Amplifier

The extended frequency range of this

generator necessitated a new design for the output amplifier. This greatly improved amplifier uses the new single-ended push-pull output stage previously described<sup>4</sup> and supplies an output of one watt to a 600-ohm load with very low distortion. Distortion at high frequencies, always a serious problem in audio amplifiers, has been kept low by means of negative feedback and good high-frequency balance. Curves showing catalog specifications for distortion and measured values for a typical generator are given in Figure 4.

#### Output Circuit


One of the important features of this generator is its calibrated output voltage. Output level is indicated by a meter and an attenuator setting, in both volts and dbm. For voltage, the attenuator dial indicates full-scale values for the voltmeter; for dbm, the attenuator reading in dbm is added to the meter reading in dbm.

The output circuit is shown in the schematic diagram of Figure 2. A simple level control at the input to the amplifier adjusts the output continuously from zero to maximum.

Following the amplifier output transformer is a 600-ohm attenuator whose input voltage is monitored by the voltmeter. The attenuator consists of two T-

<sup>4</sup>A. P. G. Peterson, "A New Push-Pull Amplifier Circuit," *General Radio Experimenter*, Vol. xxvi, No. 5, October, 1951.

Figure 4. Curve A, harmonic distortion as a function of frequency as measured on a typical Type 1304-B Beat-Frequency Audio Generator. Curve B, catalog specifications for distortion in this oscillator.

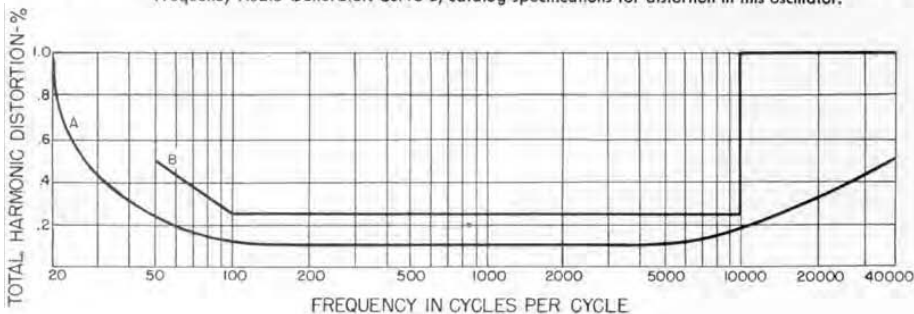



pads, controlled by a switch to give steps of 0, 20, 40, and 60 db attenuation. Over-all attenuator accuracy is  $\pm 1\%$  of nominal value.

The meter circuit is designed to respond to the average of the voltage waveform and is calibrated in r-m-s voltage. The voltmeter rectifying elements are two 1N54-A germanium diodes used in a full-wave rectifier circuit. Accuracy of the meter indication is  $\pm 5\%$  of actual reading.

When the attenuator is set at the +20 db position and the ground strap is disconnected from the lower output terminal, the output circuit is sufficiently well balanced for operation into most balanced audio-frequency equipment. The other attenuator positions should be used only for single-ended output, because the attenuator is inserted only in the lead connected to the upper output terminal.

### Zero-Beat Indicator

The output voltmeter is an excellent zero-beat indicator. Thus there is no necessity for any other means. As an accurate calibrating system, a small voltage of power line frequency can be injected to be zero beat with the generated frequency as indicated on the voltmeter. A convenient fifth position of the output attenuator switch is used for this calibration. The frequency is brought to the calibration value by adjustment of the zero control. Warm-up drift is compensated for in the same manner.

### Applications

The TYPE 1304-B Beat Frequency Audio Generator is an excellent oscillator for use in practically any application within its frequency range.

It is ideal as a signal source for measurements of amplifier and filter characteristics in the sonic and ultrasonic range, for measuring the amplifier and loudspeaker response of sound reproducing systems, for determining the frequency characteristics of audio transmission lines, networks, meters, and meter circuits, and for many other similar applications where a flat output-voltage characteristic is preferred.

For use with a recorder in these applications, it is particularly advantageous that the frequency dial can be geared to, and rotated by, the mechanism of a recorder, and that the 20-cycles-to-20-kc logarithmic scale of the dial can be synchronized with the logarithmic scale of the recorder paper.

The generator can be used as a signal source, for measurements of harmonic distortion generated in audio-frequency equipment. It can be used as a sine-wave source for modulating r-f signal generators and test oscillators or to trigger pulse generators. A very frequent use is as a generator for audio-frequency bridges. It is also an excellent signal source for psycho-acoustical work.

The metered output voltage makes it convenient for setting operating levels of amplifiers, oscillographs, and other equipment. It can also be used to measure voltage by substitution methods. The frequency of other audio and ultrasonic signals can be measured by use of Lissajous' figures on a cathode-ray oscillograph.

In brief, it is indispensable for use in any audio and ultrasonic work — both for the numerous, small, unexact jobs that constantly arise, and for those exacting jobs requiring the utmost in performance from all equipment used.

— C. A. WOODWARD





## SPECIFICATIONS

**Frequency Range:** 20 to 40,000 cycles in two ranges.

**Frequency Controls:** The main control is engraved from 20 to 20,000 cycles per second and has a true logarithmic frequency scale. The total scale length is approximately 12 inches. The effective angle of rotation is 240°, or 80° per decade of frequency. For the higher range, throwing a panel switch adds 20 kc to the scale frequency. The frequency increment dial is calibrated from +50 to -50 cycles.

**Frequency Calibration:** The calibration of the frequency control dial can be relied upon within  $\pm(1\% + 0.5 \text{ cycle})$  after the oscillator has been correctly set to the line frequency or to zero beat. The 20 kc added by the range switch is accurate within  $\pm 0.5\%$ . The accuracy of calibration of the frequency-increment dial is  $\pm 1 \text{ cycle}$ .

**Zero-Beat Indicator:** The output voltmeter is used to indicate zero beat.

**Frequency Stability:** The drift from a cold start is less than 7 cycles in the first hour and is essentially completed within two hours.

**Output Attenuator:** The output attenuator is for use only with single-ended output. It has three steps of 20 db each, with an accuracy of  $\pm 1\%$  of the nominal attenuation.

**Output Control:** For each step of the attenuator, the output voltage can be varied continuously from zero to the maximum voltage.

**Output Voltage:** Full-scale, open-circuit output voltages of 50 millivolts, 500 millivolts, 5 volts, and 50 volts are provided. For a 600-ohm resistive load, the variation of output voltage with frequency is as follows:

**NORMAL Range:** Between 20 and 20,000 cycles the output voltage varies less than  $\pm 0.25 \text{ db}$ .

**ADD 20 KC Range:** Between 20 and 30 kc the output voltage varies less than  $\pm 0.5 \text{ db}$ . Between 30 and 40 kc the variation is less than  $\pm 1 \text{ db}$ . For open-circuit operation, the output voltage rises considerably at the higher frequencies.

**Output Voltmeter:** Calibrated in volts output at open circuit, and in dbm. Above 10% of full scale the calibration is accurate within  $\pm 5\%$  of the reading.

**Output Impedance:** 600 ohms, resistive, within  $\pm 2\%$ . With zero attenuation setting of the output attenuator, the output may be used either balanced or with one side grounded. With one side of the output grounded, the attenuator may be used throughout its entire range.

**Output Power:** 1 watt maximum into a 600-ohm resistive load.

**Harmonic Distortion:** The total harmonic content is less than 0.25% from 100 to 10,000 cycles. Below 100 cycles the harmonic content increases and may reach 0.5% at 50 cycles. Above 10,000 cycles the harmonic content is less than 1%.

**A-C Hum:** Less than 0.1% of the output voltage for output voltmeter readings above 10% of full scale.

**Terminals:** TYPE 938 Binding Posts and standard Western Electric double output jack on panel; a standard four-terminal socket at the rear.

**Mounting:** Aluminum, 19-inch, relay-rack panel; aluminum cabinet. For table mounting (TYPE 1304-BM), aluminum end frames are supplied to fit ends of cabinet; for relay-rack mounting (TYPE 1304-BR), brackets for holding cabinet in rack are supplied. Relay rack mounting is so arranged that panel and chassis can be removed from cabinet, leaving cabinet in rack, or cabinet can be removed from rear of rack, leaving panel attached to rack.

**Power Supply:** 105 to 125 (or 210 to 250) volts, 50 to 60 cycles. Power consumption is about 100 watts.

**Tubes:** 2 — 6SL7-GT            1 — 6SA7  
2 — 6AU5-GT            1 — 12AT7  
2 — 0D3                    1 — 5V4-G

**Accessories Supplied:** Power cord, four-terminal plug, and spare fuses.

**Dimensions:** 19 $\frac{3}{8}$  x 15 $\frac{1}{4}$  x 7 $\frac{1}{4}$  inches, over-all.

**Net Weight:** 39 pounds.

Type		Code Word	Price
1304-BM	Beat-Frequency Oscillator (Table Mounting) . . . . .	CAROL	\$555.00
1304-BR	Beat-Frequency Oscillator (Relay-Rack Mounting) ..	CARGO	555.00

U. S. Patent 2,298,177.

Patent Applied For.

Licensed Under Patents of American Telephone and Telegraph Company.

Licensed Under Patents of Radio Corporation of America.





## BETTER SERVICE FOR CUSTOMERS IN WASHINGTON, D. C., AND VICINITY —NEW BRANCH OFFICE

To provide better service to our customers in the District of Columbia and adjacent territory, we have opened a branch engineering office at Silver Spring, Maryland.

Through this office we can furnish technical and commercial information promptly about General Radio products and aid in the selection of equipment to meet specific measurement problems.

William R. Saylor, formerly of the Sales Engineering Staff at Cambridge, is Manager of the new office. Mr. Saylor received his S.B. and S.M. degrees from M.I.T. in 1937 and joined our organization in 1943. Since that date his work has included both development engineering and sales engineering, and he has an extensive knowledge of the performance and application of General Radio instruments.



William R. Saylor

*The address of the new office is*

### GENERAL RADIO COMPANY

8055 13th Street, Silver Spring, Maryland

Telephone: JUniper 5-1088

## SUMMER CLOSING

### Vacation

During the weeks of July 25 and August 1, our Manufacturing Departments will be closed for vacation.

There will be business as usual in the Sales Engineering and Commercial Departments. Inquiries, including requests for technical and sales information, will

receive our usual prompt attention.

Our Service Department requests that, because of absences in the manufacturing and repair groups, shipments of material be scheduled to reach us either well before or delayed until after the vacation period.

## PROMPT DELIVERY

Remember — you can get delivery from stock on 98% of our standard catalog items.



IET LABS, INC in the GenRad tradition

534 Main Street, Westbury, NY 11590

TEL: (516) 334-5959 • (800) 899-8438 • FAX: (516) 334-5988

www.ietlabs.com



## MISCELLANY

**VISITORS:** We have welcomed recently at our Cambridge plant the following visitors from foreign countries: D. J. Fuings and Norman Lea, Baddow Research Laboratories, Marconi's Wireless Telegraphy Company, Ltd., Great Baddow, Essex, England; Mr. and Mrs. K. L. Nyman of Helsinki, distributors of General Radio products in Finland; E. P. Courtillot, Assistant Chief Engineer of Electronic Group, French Thompson Houston Company, Paris, France; Dr. H. Bienfait and M. M. Jansen-Gration of Phillips Laboratories, Eindhoven, Holland; Ing. Virgilio Floriana, President, and L. Confalonieri of S.P.A. "Telettra," Milan, Italy; Professor Gino

Morandi of the University of Bologna, Bologna, Italy; Gunner Lindstrom and Dag Hartman, Production Supervisor, Saab Aircraft Company, Linkoping, Sweden; Dr. Y. Tsuji, Sub-Manager of the Engineering Division, Sumitomo Electric Industries, Ltd., Osaka, Japan; S. Nakamura and K. Ozawa of Meidensha Electric Manufacturing Company, Ltd., Tokyo, Japan; T. Tsumura, Chief, Engineering Section of Electronic Products Works, Mitsubishi Electric Manufacturing Company, Amagasaki, Japan; Dr. Koji Kobayashi, Vice-President and Works Manager, Nippon Electric Company, Ltd., Minatoku, Tokyo, Japan.

***T**HE General Radio EXPERIMENTER is mailed without charge each month to engineers, scientists, technicians, and others interested in electronic techniques in measurement. When sending requests for subscriptions and address-change notices, please supply the following information: name, company address, type of business company is engaged in, and title or position of individual.*

## GENERAL RADIO COMPANY

275 MASSACHUSETTS AVENUE

CAMBRIDGE 39

MASSACHUSETTS

TELEPHONE: TRowbridge 6-4400

## BRANCH ENGINEERING OFFICES

NEW YORK 6, NEW YORK  
90 WEST STREET  
TEL.—WOrth 4-2722

LOS ANGELES 38, CALIFORNIA  
1000 NORTH SEWARD STREET  
TEL.—HollyWood 9-6201

CHICAGO 5, ILLINOIS  
920 SOUTH MICHIGAN AVENUE  
TEL.—WAbach 2-3820

SILVER SPRING, MARYLAND  
8055 131st STREET  
TEL.—JUiper 5-1088

## REPAIR SERVICES

WEST COAST  
WESTERN INSTRUMENT CO.  
826 NORTH VICTORY BOULEVARD  
BURBANK, CALIFORNIA  
TEL.—Vlctoria 9-3013

CANADA  
BAYLY ENGINEERING, LTD.  
FIRST STREET  
AJAX, ONTARIO  
TEL.—Toronto EMpire 8-6866

PRINTED  
IN  
U.S.A.

